

STANDARD OPERATING PROCEDURE
Soil Bulk Density Determination Using the Eijkelkamp Soil Sampler

KEY WORDS

Soil; Eijkelkamp Bulk Density Soil Sampler

APPROVALS

APPROVED BY: Original Signed By _____ DATE: 02/18/2014
Sheryl Gill
Environmental Monitoring Branch Mangement

APPROVED BY: Original Signed By _____ DATE: 02/18/2014
Murray Clayton
Environmental Monitoring Branch Senior Scientist

APPROVED BY: Original Signed By _____ DATE: 02/18/2014
Chang-Sook Lee Peoples
Environmental Monitoring Branch Quality Assurance Officer

PREPARED BY: Original Signed By _____ DATE: 02/18/2014
Kevin Richardson
Environmental Monitoring Branch Scientific Aid

Environmental Monitoring Branch organization and personnel, such as management, senior scientist, quality assurance officer, project leader, etc., are defined and discussed in [SOP ADMN002.01](#).

STANDARD OPERATING PROCEDURE

Soil Bulk Density Determination Using the Eijkelkamp Soil Sampler

1.0 INTRODUCTION

The California Department of Pesticide Regulation periodically conducts field studies where soil bulk density is characterized. Soil bulk density is determined by associating the dry weight of a soil sample with its specific volume.

Several types of equipment are available for sampling soil to determine bulk density. The strengths and weaknesses of each equipment type are largely dependent on the configuration of soil sample to be collected. A large-diameter soil collection ring might be preferred for sampling soil at the surface where a more representative sample will be obtained. A long, narrow collection cylinder offering greater soil penetration capability might be preferred for collecting a single, deep, contiguous soil sample. For collecting undisturbed soil samples to determine bulk density at specific or sequential soil depths the Eijkelkamp Bulk Density Soil Sampler offers the greatest accuracy (Richardson and Clayton, 2013).

1.1 Purpose

This SOP defines the method for collecting a soil sample using the Eijkelkamp Bulk Density Soil Sampler and to determine soil bulk density.

2.0 EQUIPMENT

2.1.1 Eijkelkamp Soil Sampler, including

- 2.1.1.1 Sample rings
- 2.1.1.2 Extension
- 2.1.1.3 Handle crossbar

2.1.2 Putty knife

2.1.3 Shovel

2.1.4 Rubber or plastic mallet

2.1.5 Bucket Auger

2.1.6 Sample jars - 1/2 pint wide mouth mason jars, labeled and weighed (to 0.1g)

2.1.7 Balance (accurate to 0.1g)

2.1.8 Soil Bulk Density Worksheet (Appendix 1)

2.1.9 Drying oven

STANDARD OPERATING PROCEDURE Soil Bulk Density Determination Using the Eijkelkamp Soil Sampler

3.0 SOIL COLLECTION PROCEDURES

3.1 Check all equipment before heading out to the field.



3.2 Insert the soil sample collection ring into the sampler head.



When inserting soil sample collection ring into sampler head, make sure beveled end is facing towards the sampler head's end



STANDARD OPERATING PROCEDURE
Soil Bulk Density Determination Using the Eijkelkamp Soil Sampler

- 3.3** Attach the sampler head to the handle making sure that the pin is firmly locked into the groove.



- 3.4** Soil sampler shown fully assembled.



STANDARD OPERATING PROCEDURE

Soil Bulk Density Determination Using the Eijkelkamp Soil Sampler

- 3.5** Use an auger or shovel to remove soil to just above the desired depth to be sampled for bulk density.



- 3.6** Place the fully assembled soil sampler on top of the soil sample to be collected. Drive the soil sampler into the soil to a depth that ensures the sample ring is full of soil (greater than 5cm, but less than 10cm).



STANDARD OPERATING PROCEDURE
Soil Bulk Density Determination Using the Eijkelkamp Soil Sampler

- 3.7** If it is difficult to push the soil sampler into the soil, strike the top of the soil sampler with a rubber or plastic mallet.



- 3.8** Once reaching the proper depth, turn the handle of the soil sampler 90° to break the soil at the base of the sampler from the soil below.



STANDARD OPERATING PROCEDURE
Soil Bulk Density Determination Using the Eijkelkamp Soil Sampler

3.9 Continue to rotate the soil sampler while lifting it from the hole.



3.10 Remove the soil sample collection ring from the sampler head.



STANDARD OPERATING PROCEDURE
Soil Bulk Density Determination Using the Eijkelkamp Soil Sampler

- 3.11** Use a putty knife to remove excess soil from the top and bottom of the sample collection ring so that the soil is flush with the sides of the ring.



- 3.12** Place caps on both ends of the sample collection ring to maintain sample integrity.



STANDARD OPERATING PROCEDURE
Soil Bulk Density Determination Using the Eijkelkamp Soil Sampler

- 3.13** Label the sample collection ring and place it in a secure location for transport.



- 3.14** Brush or tap the sampler head to remove excess soil before taking the next sample.



- 3.15** To continue sampling, follow steps 3.2 through 3.14.

STANDARD OPERATING PROCEDURE

Soil Bulk Density Determination Using the Eijkelkamp Soil Sampler

4.0 SAMPLE PREPARATION

Typically, soil samples are dried in the Eijkelkamp Soil Sampler rings. However, soil samples collected using the Eijkelkamp rings could be transferred to mason or other jars for storage. Sections **4.1 – 4.4** explain the procedure for drying soil in the rings or jars and weighing of the samples.

- 4.1** Remove the plastic lids from the rings containing the samples and wrap the bottom of the rings with small pieces of aluminum foil. If soil samples are contained in jars then remove the lid.
- 4.2** Set the samples in a 105°C oven and allow them to dry until a constant weight is reached. Typically, leaving the samples in the oven overnight is sufficient however; leaving them in the oven longer will not present any problems.
- 4.3** Remove the soil from the Eijkelkamp Soil Sampler rings and foil, or glass jars, and weigh dry soil samples. Record the weights in the “**Dry Soil Weight**” column of the Soil Bulk Density Worksheet (Appendix 1).

NOTE: Sample bulk densities are automatically calculated once the sample soil dry weights are entered into the workbook.

- 4.4** Put un-weighed samples back in the oven until sample preparation can be resumed.

STANDARD OPERATING PROCEDURE
Soil Bulk Density Determination Using the Eijkelkamp Soil Sampler

5.0 CALCULATING BULK DENSITY

The Soil Bulk Density Worksheet (Appendix 1) automatically calculates the bulk densities of the samples using the following equation:

$$\text{Equation 1: Bulk Density (g/cm}^3\text{)} = M_d / V$$


M_d = Mass of dry soil sample (grams)

V = Soil volume (cm³)

Standard Eijkelkamp Sampler Cylinder Size:

Area: 19.6 cm²

Volume: 100 cm³

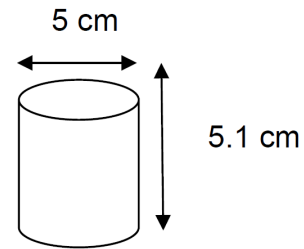

6.0 TYPICAL BULK DENSITIES FOR VARIOUS SOIL TYPES

According to Koorevaar, et al (1983), the expected bulk densities for various soil types are as follows:

- **Peat Soils** 0.25 g/cm³
- **Loamy and Clay soils** 1.1g/cm³
- **Sandy Soils** 1.6 g/cm³
- **Compacted Soils** 1.90 g/cm³

STANDARD OPERATING PROCEDURE
Soil Bulk Density Determination Using the Eijkelkamp Soil Sampler

7.0 REFERENCES:

For references not available email GWPP@cdpr.ca.gov

Koorevaar, P., G. Menelik, and C. Dirksen. *Elements of Soil Physics. Developments in Soil Science 13.* 3rd ed. Vol. 13. Netherlands: Elsevier Science Publishers, 1983. 9. Print.

Marshall, T. J., and J. W. Holmes. *Soil Physics.* 2nd ed. Great Britain: Cambridge University Press, 1992. Print.

Richardson, K and M. Clayton. Review of Equipment Used to Sample Soil for Determination of Bulk Density 2013. Memo previously available at at: http://www.cdpr.ca.gov/docs/emon/pubs/ehapreps/analysis_memos/2427_bulk_dsty equip_comp_memo.pdf

